




HP PSC 2410 Photosmart All In One Printer Printer Carriage Replacement

With this guide you will remove the old printer carriage and replace it with a new one.

Written By: Cody Long

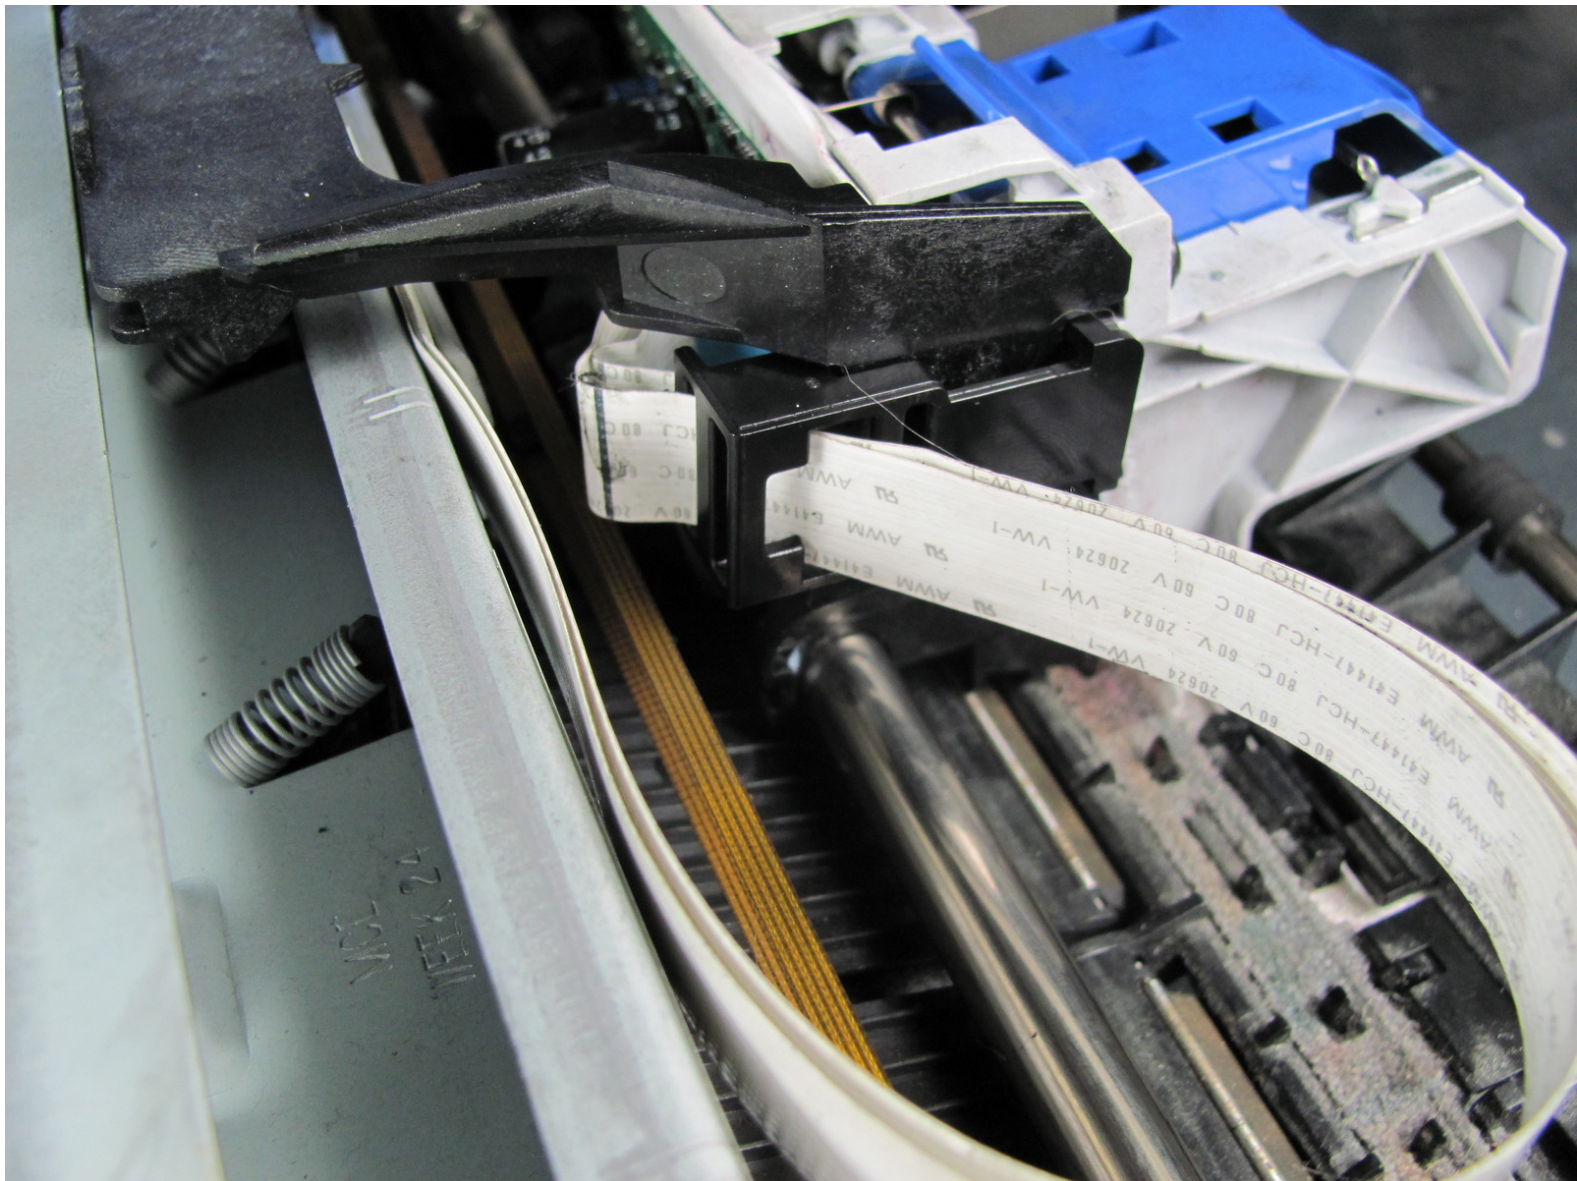

INTRODUCTION

In order to perform this installation see the guide for **Removing Scanner Tray**. After the scanner tray is removed the steps to replace the printer carriage are simple.



TOOLS:

- [T10 Torx Screwdriver](#) (1)



PARTS:


- [Printer Carriage](#) (1)

Step 1 — Remove Back Panel




- Remove the back panel by inserting your fingers into the indentations next to the tabs. Press the tabs inward towards each other while pulling the back panel toward you.

Step 2 — Remove Inner Back Pannel

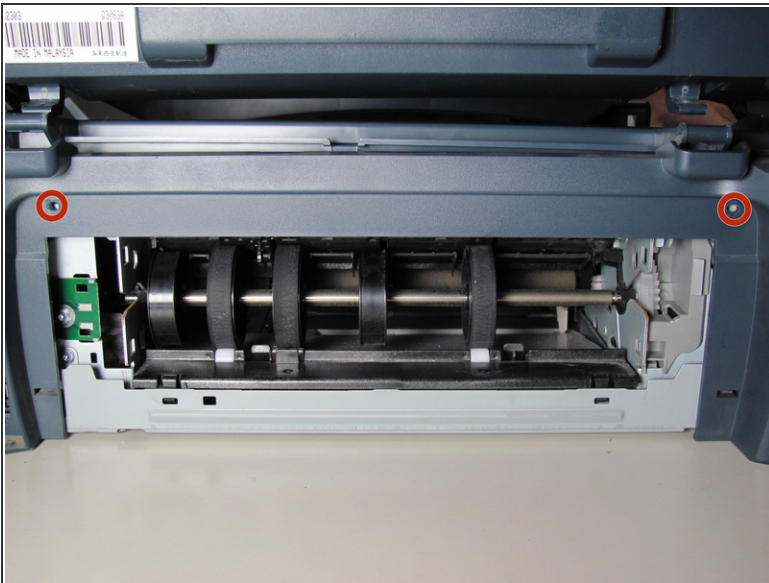


- Using the T10 Torx Security Bit Screwdriver, unscrew the screws on the upper left and right corners of the inner panel to remove the inner back panel.

Step 3 — Remove Upper Portion

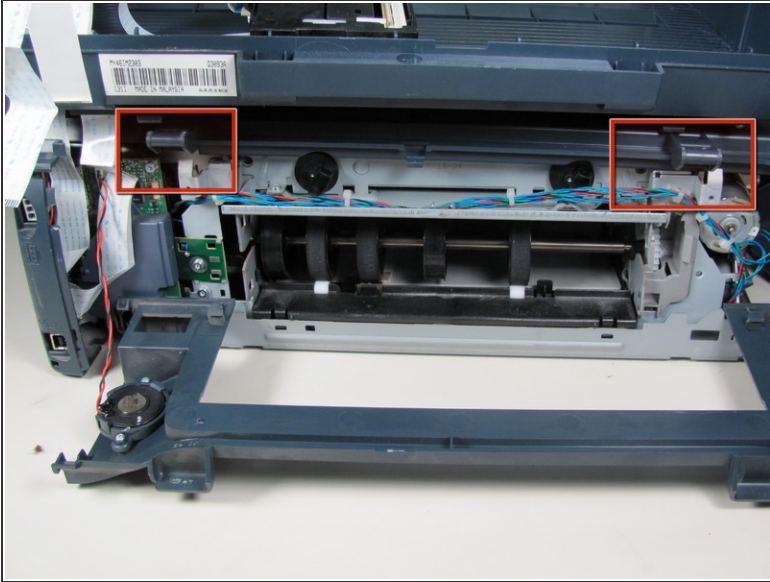



- Press down on the two plastic hinges to remove the upper portion of printer.

Step 4 — Unplug Speaker Wire

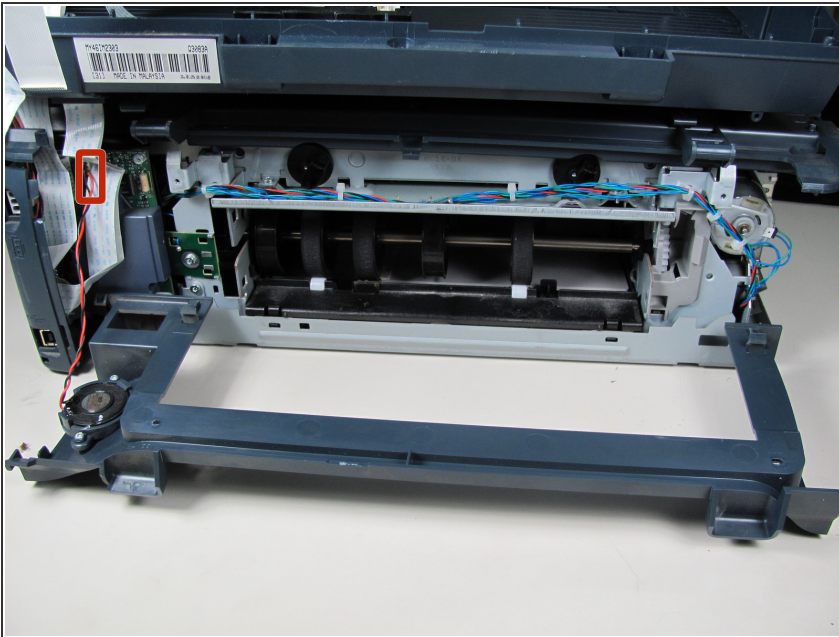


- To unplug the speaker wire, grasp the plastic plug on the end of the speaker wire then gently pull the plug away from the printer until removed.

Step 5 — Removing Scanner Tray

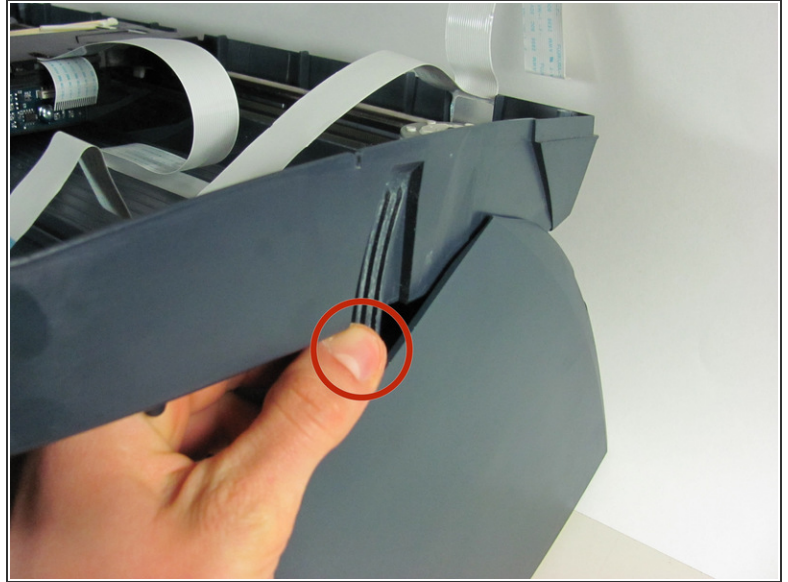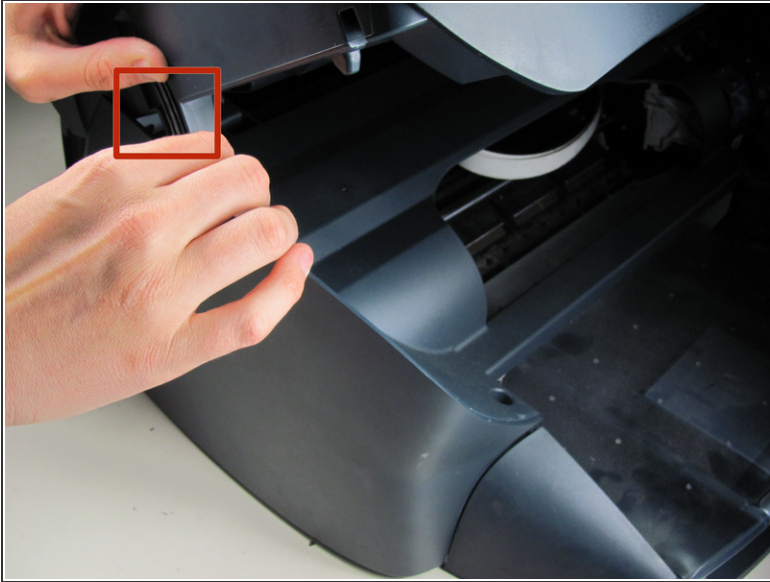


- Rotate the printer so the paper tray is facing towards you.
- Gently lift the scanner tray up and away from the printer.
- Press the gray plastic tabs inward toward to release the tabs from the printer.

Step 6 — Removing Scanner Tray - cont.

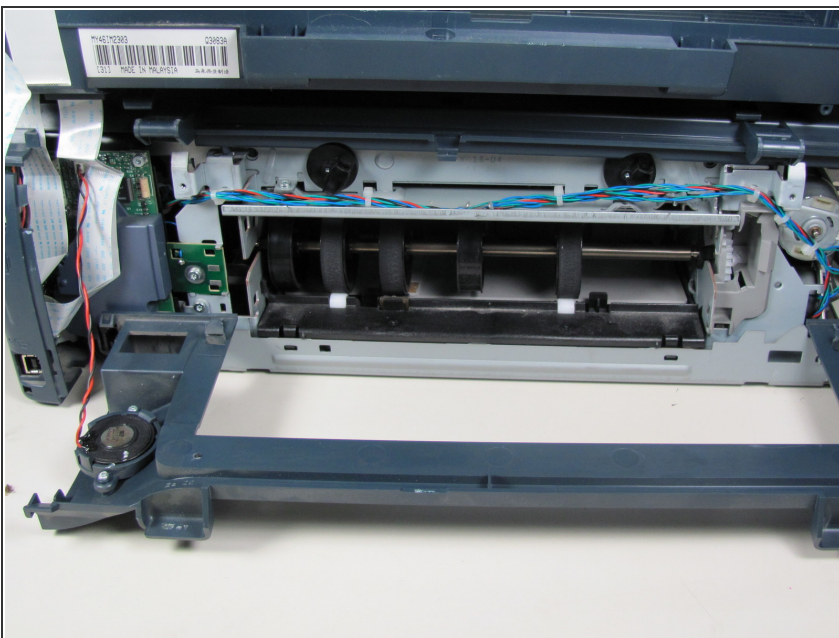


- Returning to the back of the printer, remove the scanner from the back hinges.
- ⓘ With pressure applied, the scanner will detach easily.

Step 7

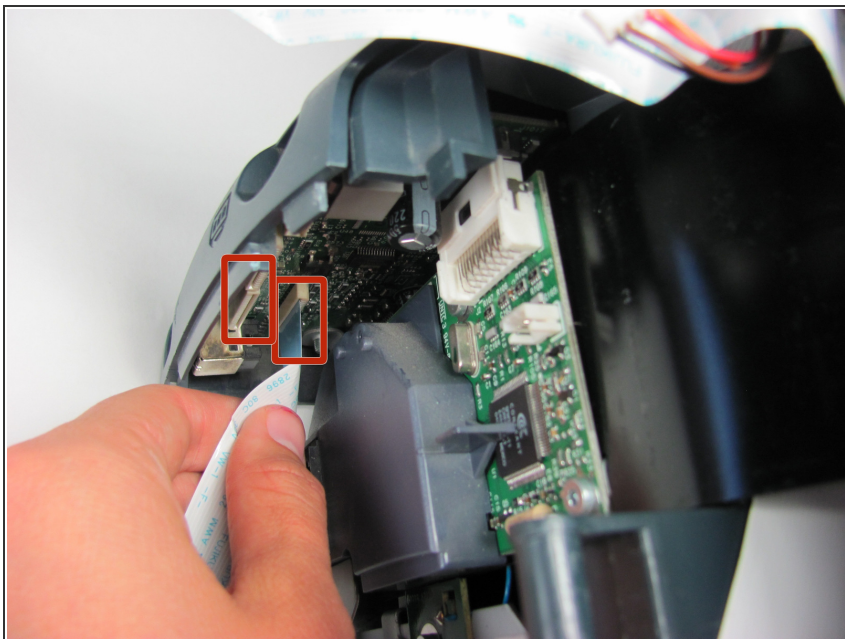

- Gently grasp and unplug the two white ribbon cables from the printer body.
- ⓘ Be sure to grasp the cable at the connector and not to pull on the wires themselves.

Step 8

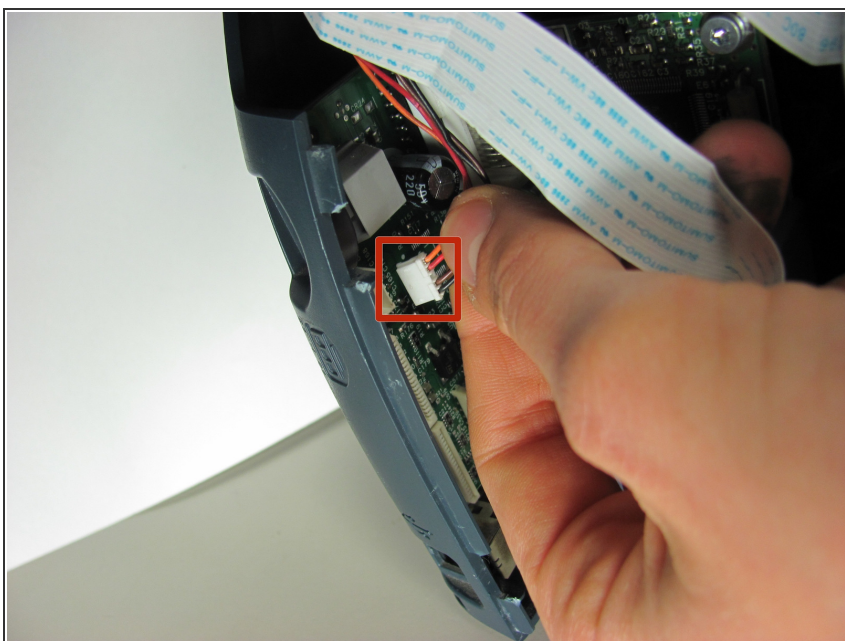

- Unplug the white plastic multi-wire connector with the orange, black, red, and brown wires from its port.
- ⓘ Be sure to grasp the white connector and not to pull on the wires themselves.

Step 9 — Detaching the Scanner Tray




- Detach the scanner tray from the printer by lifting the scanner tray off the printer body.

Step 10 — Printer Carriage






- Remove printer carriage cover by unscrewing 4 black coarse thread T-10 torx screws marked with red circles.

Step 11

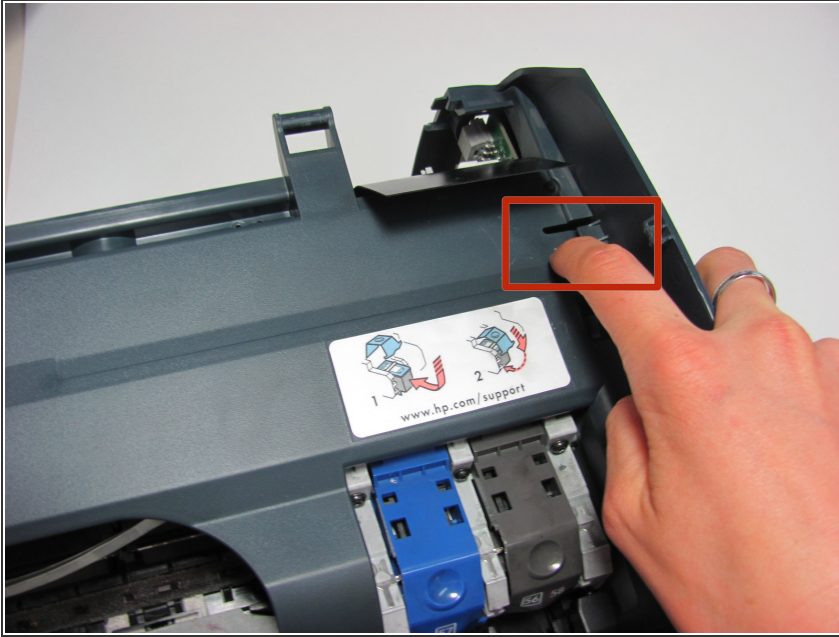


- Depress the plastic tabs marked in yellow to release the cover from the sides.

Step 12

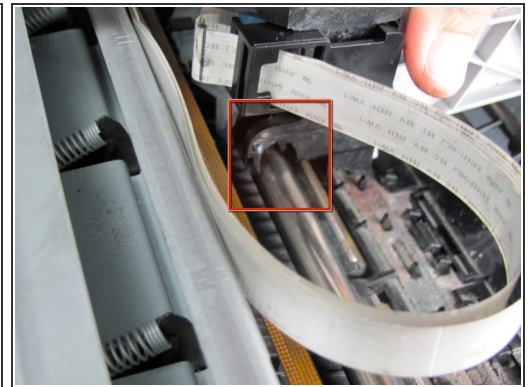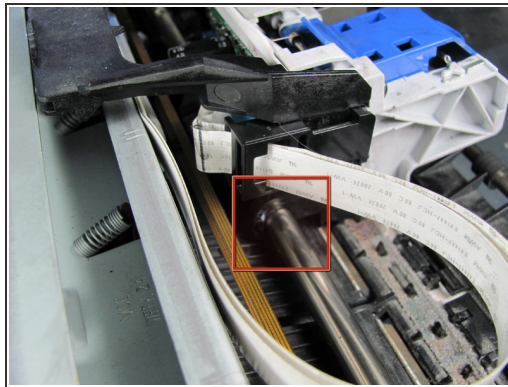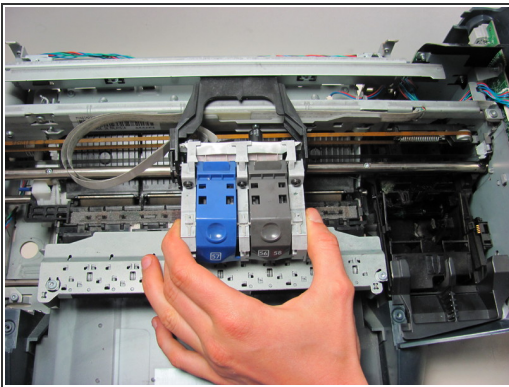

- Slide the printer carriage to the center of the printer. Disconnect the printer carriage from the rod one side at a time by pulling upward.
- ⓘ Unhooking the printer carriage is difficult and will require a fair amount of force.
- ⚠ The plastic strip that guides the carriage is fragile and can be broken easily.
- Pull carriage up from the bottom.


Step 13

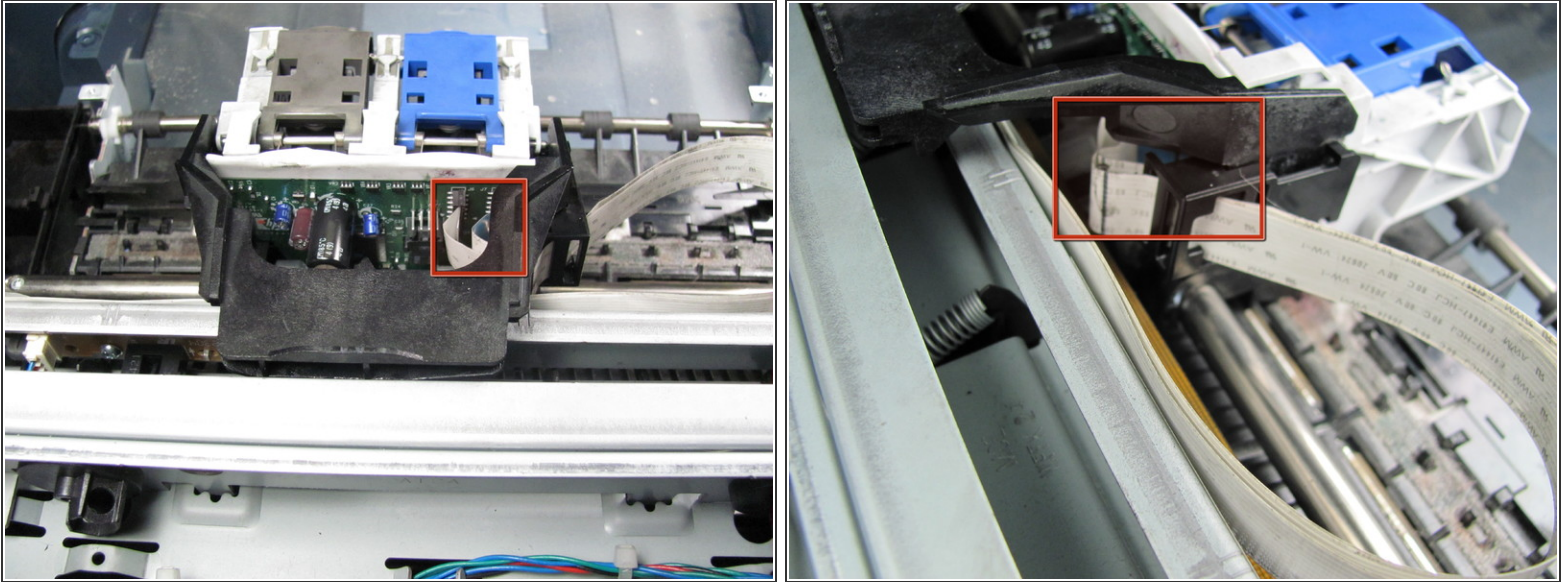

- Pull on the two white wire strips on the printer carriage to remove.

⚠ Wire strips are fragile. Pull from connection to carriage and not the ribbon cable itself.

Step 14

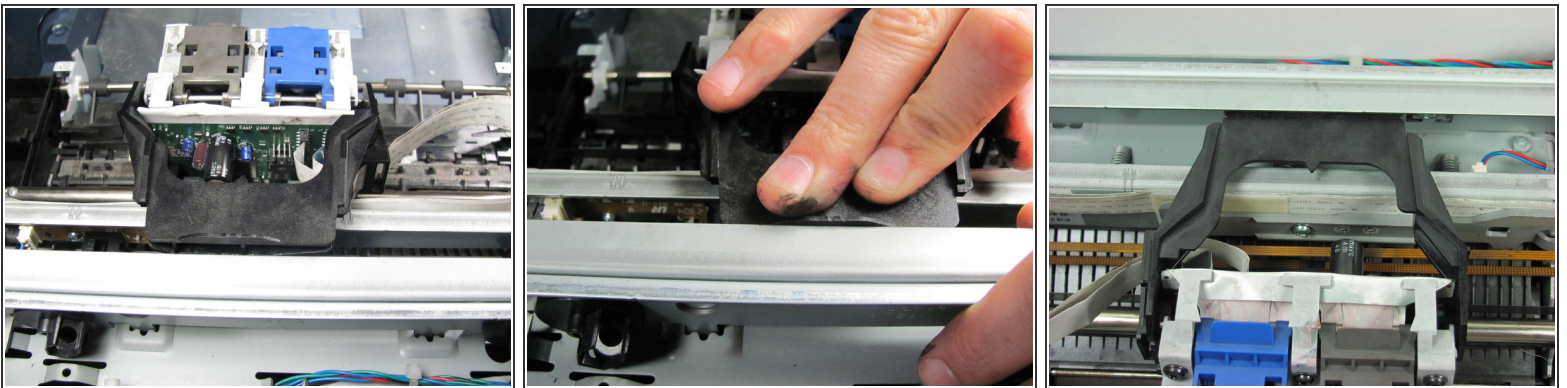

- Place new printer carriage on the carriage rod one side at a time.

⚠ For proper reassembly, place the printer carriage's black lip beneath the overhanging metal flap at the back of the printer.

To reassemble your device, follow these instructions in reverse order.

